

PET

Owner's Manual

scooter

Read this manual completely
before assembling and riding
our PET



Always wear a Helmet!

Tel. 1-707-521-9257
www.petscooters.com

PET

Table of Contents

| | |
|--------------------------------|----|
| Technical Information----- | 1 |
| Warning Statement----- | 2 |
| Read Before Riding----- | 3 |
| List Of Parts----- | 4 |
| Front Bar----- | 6 |
| Tool Kits In The Tool Bag----- | 7 |
| Assembling The Bigfoot----- | 8 |
| Charging The Batteries----- | 9 |
| Using The Alarm----- | 10 |
| Riding The Bigfoot ----- | 12 |
| Maintenance----- | 14 |
| Wiring Diagram----- | 15 |
| Trouble Shooting Guide----- | 17 |
| Warranty----- | 19 |

| | |
|------------------|--|
| Model No. | PET Bigfoot |
| Product size | 67.7 L x 41 W x 32.7 H inch (172 L x 105 W x 83 H cm) |
| Type of motor | DC brushless motor |
| Motor power | 60 V 1000W |
| Battery type | Li battery |
| Battery capacity | 60V 12Ah |
| Charger | 110V-240V, UL approved |
| Charging time | 5-6 hours |
| Max. speed | Up to 22.8 MPH (38 km/h) |
| Single charge | Up to 30 MILES (50 km) |
| Max capacity | 440 LBS (200 kg) |
| Net weight | 121 LBS (55 kg) |
| Package size | 69.3 L x 15 W x 34.3 H inch (176 L x 38W x 87 H cm) |
| Brake | Front: Hydraulic disc, rear: Hydraulic disc |



IMPORTANT!

Before you operate your PET please read carefully:

YOUR EXISTING INSURANCE POLICY MAY NOT PROVIDE COVERAGE FOR ELECTRIC VEHICLES, YOU SHOULD CONTACT YOUR INSURANCE AGENT TO DETERMINE IF COVERAGE IS PROVIDED.



Do not ride this scooter until you read and thoroughly understand the owner's manual. It contains information critical to your safety. If you have questions about the operation of this scooter, you should consult your authorized dealer.



It is extremely important that you follow the safety guidelines contained in this manual in order to insure maximum safety.



Failure to comply with the standards outlined in this manual could result in fire and/or serious injury.



PET is not liable for any damage or injuries caused by unsafe or faulty repairs. Any repairs made to this product by unauthorized service technicians are the sole responsibility of the owner.



Our products are designed to be ecologically conscious, please dispose of used batteries in compliance with local laws.

WARNING

THE ELECTRIC PET IS NOT A TOY AND SHOULD NOT BE OPERATED BY ANY ONE UNDER 12 YEARS OLD.

Safety Instruction

(Please take note of the followings before each ride)

- The maximum weight capacity is 440 LBS.
- Only one person at a time should ride.
- Always wear protective gear including knee and elbow pads and an approved safety helmet when riding the PET
- Before riding be sure to check that all pivot points, locking buttons, quick releases, and latches are secured properly.
- The power switch lock must be in the "off" position when the PET is being charged.
- Do not use the PET when it is raining.
- Do not place the battery near heat or fire.
- Do not expose the charger to water or any moisture.
- Check if battery is properly charged and installed.
- Charge battery after each use.
- Always ride on dry paved surfaces. Gravel, wet and uneven surfaces are a hazard.

Check if all tires are properly inflated.



-
- 1 Throttle
 - 2 Multi-function Instrument
 - 3 Brake lever
 - 4 Seat
 - 5 Frame
 - 6 Rear fender
 - 7 Brake lamp
 - 8 Rear brake assembly
 - 9 Motor
 - 10 Rear brake plate
 - 11 Rear tire
 - 12 Battery
 - 13 Front fork
 - 14 Front brake assembly
 - 15 Front tire
 - 16 Front fender




- 1 Rear brake lever
- 2 Horn switch
- 3 Multi-function Instrument
- 4 Key switch
- 5 Front brake lever
- 6 Throttle




- 1 Screwdriver
- 2 Allen wrench (8mm)
- 3 Wrench (12 x 14mm)
- 4 Charger

1. Unpack the PET Bigfoot carefully so that you do not misplace any of the parts.
2. Place the PET Bigfoot on a flat level surface. Remove the bolts in the front stem. Place the handle bar(A) into the front stem(B). After aligning the holes, place the bolt through the handle bar assembly. Twist the bolts, do not hammer them through. Tighten the bolt with the tool provided.

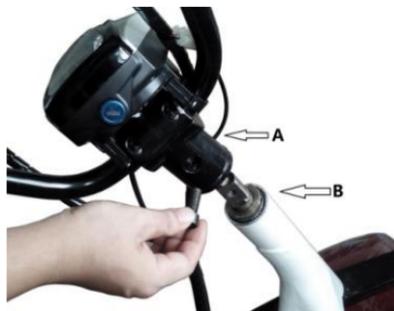

● Before you ride the PET Bigfoot for the first time you must charge the batteries for 5-6 hours using only the supplied charger.

● To charge the batteries, plug the charger into the charger socket located on the side of the battery/ controller compartment. Then plug the charger into a wall outlet.

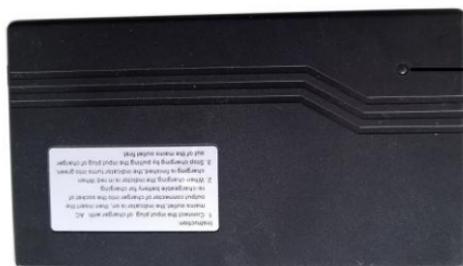

Red---charging
Green---charged



1. "1" is the Alarm Button. when shutting off the main key, pressing one time gently, the horn will ring one loud, the scooter will be on alert. When touching the scooter or driving the scooter, the horn will ring 15 seconds. If forcing to move the scooter, the horn will ring continuously.
2. "2" is the Disarm Button. Pressing this button one time gently, the horn will ring two loud, then the alert is removed. It also will shut the horn off if the alarm has been activated.
3. "3" is Start Button. Pressing this button for two times continuously, the horn will ring one loud, the power is on.
4. "4" is Find Button, when pressing this button

one time gently, the horn will ring five seconds and alerts us the scooter's location.

●When the power is shut down, pressing “4” button until horn rings. Ringing one loud stands for sensitivity level 1(highest), ringing two loud stands for sensitivity level 2..... Sensitivity is 4 levels in all.

●Pressing “3” button all the time until having a beep, then pressing “1” button or “2” button quickly, you can open or close a key starting function. When opening a key starting function, pressing “3” button, you can drive your scooter without key.

●Once you have completed the initial charge you are ready to ride. Remember, this is not a toy. The PET can reach speeds up to 22.8 mph depending on the terrain and the weight of the rider. You must wear a helmet and protective pads. Be aware of all local laws and ordinances that govern and/or restrict the use of powered scooters. The laws and ordinances vary greatly from municipality to municipality. It is your responsibility to know and abide by your local restrictions.

●To ride, plug the key into the key switch and turn the key in clockwise direction till the first click. The battery gauge will be illuminated indicating that the battery is in operation. If you want to turn on the front light, please turn the key to the second click in clockwise direction.



●Hold onto the front bar with both hands. Your left fingers will control the rear brakes and your right

hand will control the throttle and front brakes. As you turn the throttle towards yourself, the speed will be increased. Release the throttle and apply the brake to stop the scooter. You will control the speed of the scooter by using both the throttle and the brake. When the brake handle is squeezed it cuts power off the throttle.


NOTE 1: WARNING: Never try stunts . Always maintain a safe speed.

NOTE 2: When scooter is parked, please turn off the power and take off the key, this will avoid anyone from accidentally turning the throttle causing the scooter to speed forward. Failure to do this could lead to an accident.


NOTE 3: If you need to stop in an emergency or kill power quickly, you can turn the key off.

Battery: (for professional use only)

The PET Bigfoot is powered by 60 volt, rechargeable batteries housed in a single compartment. Other than recharging, these batteries need no maintenance. To prolong battery life, recharge the battery after each use. You must also charge your PET if it has not been used for 30 days. If you need to replace the battery pack, it is located inside the battery compartment on the footboard. To get to the battery pack, remove the compartment cover by loosening the screws. To remove the batteries disconnect the wires from the battery terminals. Replace the battery pack with a new one and reconnect the wires. Follow the instructions on charging batteries to charge the new batteries.

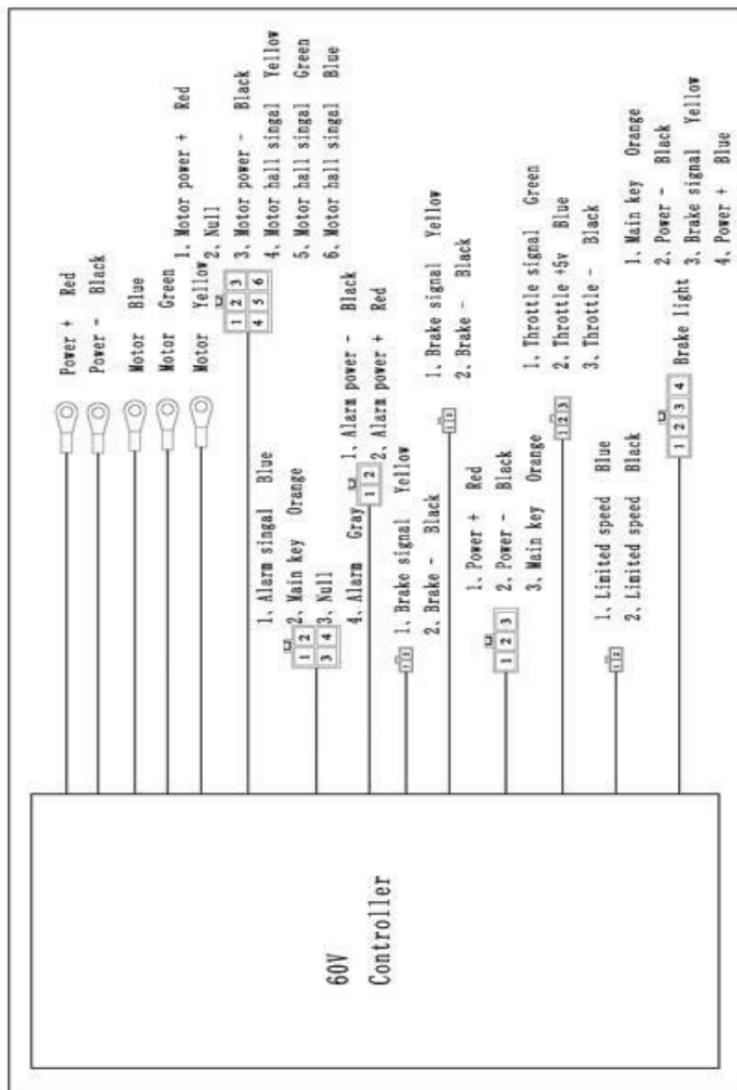

Note: See from the wire

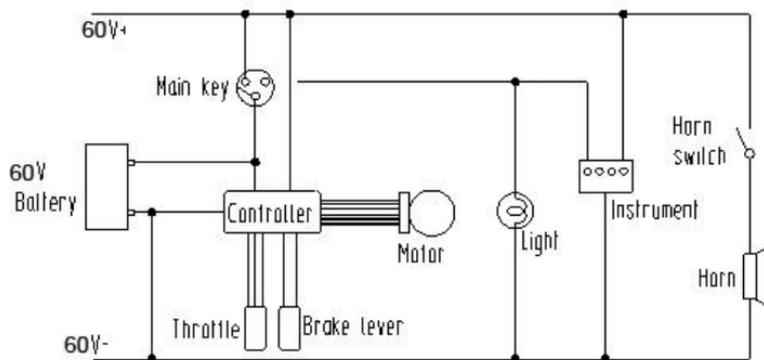

| Problem | Cause | Solution |
|--|---|---|
| Speed regulation failure or maximum speed reduced. | <ol style="list-style-type: none">1. Low battery2. Throttle is destroyed.3. The throttle handle is not operating properly. | <ol style="list-style-type: none">1. Recharge your battery for 4~6 hours.2. Replace throttle. Call Customer Service to order a new throttle.3. Replace throttle. Call Customer Service to order a new throttle. |
| Power is on, but PET Bigfoot still does not work. | <ol style="list-style-type: none">1. The battery connection loose.2. The throttle is destroyed.3. The motor connecting lines loose or destroy. | <ol style="list-style-type: none">1. Repair again.2. Replace throttle. Call Customer Service to order a new throttle.3. Get professional maintenance depot |
| The single charge is insufficient after charging | <ol style="list-style-type: none">1. Tire pressure is insufficient.2. The charging is insufficient or the charger is destroyed.3. The battery aging or damaged. | <ol style="list-style-type: none">1. Inflate tire.2. Fully charged or replace the charger.3. Replace the battery. |

| | | |
|----------------------------|--|---|
| The charger does not work. | <ol style="list-style-type: none">1. The charger plug fall off or plug and socket connection loose.2. The fuse burnout.3. The battery connection lines fall off. | <ol style="list-style-type: none">1. Fasten the plug.2. Replace the fuse.3. Weld the battery connection lines well. |
| Others trouble | <ol style="list-style-type: none">1. When can not determine trouble.2. When motor, battery, controller and charger damaged. | Please call customer service or Get professional maintenance depot. |

The Limited Warranty does not cover or apply to the following: Normal wear and tear; any damage, failure and/or loss caused by accident, misuse, neglect, abuse and/or failure to follow instructions or warnings as stated on the product or in the applicable owner's manual or other printed materials provided with the product; damage, failure and/or loss caused by the use of the product in any other manner for which such products were not specifically designed.

Any part of the PET product manufactured or supplied by PET and found in the reasonable judgment of PET to be defective in material or workmanship will be repaired or replaced by an authorized PET service dealer without charge for parts or labor. PET is responsible for the expense of delivering the warranty replacement parts. However, if the customer chooses not to replace the parts, the expense of delivering the PET product to the factory or authorized service dealer for warranty work or the expense of returning it back to the owner after repair or replacement will be paid for by the owner. PET's responsibility in respect to claims is limited to making the required repairs or replacements and no claim of breach of warranty shall be cause for

cancellation or rescission of the contract of sale of any PET product. Proof of date of purchase will be required by the dealer to substantiate any warranty claim. An authorized PET service dealer must perform all warranty work. The warranty is limited to thirty (30) days from the date of purchase for any PET product that is used for rental demonstration or commercial purposes or any other income producing purpose. This warranty does not cover any PET product that has been subject to misuse, neglect, negligence or accident, or has been operated in any way contrary to the operating instructions as specified in the PET owner's manual. This warranty does not apply any damage to the PET product that is the result of improper maintenance or to any PET product that has been altered or modified so as to adversely affect the products operation, performance or durability or that has been altered or modified to change its intended use. This warranty does not extend to repairs made necessary by normal wear and or by use of parts that are incompatible with PET products. In addition this warranty does not cover items that experience normal wear and tear. PET reserves the right to improve the design of the product without assuming any

obligations to modify any product previously manufactured. All warranties are limited in duration to the six (6) months warranty period. Any such implied warranties including merchantability, fitness for a particular purpose or otherwise are disclaimed in their entirety after the expiration of the appropriate thirty day warranty period. PET's obligation under this warranty is strictly and exclusively limited to the repair and replacement of defective parts and PET does not assume any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. PET assumes no responsibility for incidental consequential or other damages including but not limited to expense of returning the PET product to an authorized service dealer and expense of delivering it back to the owner. Mechanic's travel, time telephone charges, rental of a like product during the time the warranty service is being performed travel loss or damage to personal property, loss of revenue, loss of time, or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitations may not apply to you.

WHAT PET WILL DO:

PET will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. PET may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. You are responsible to get the unit back to PET.

HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call or fax to the following telephone numbers for PET Customer Service - warranty repair

Tel. [1-707-521-9257](tel:1-707-521-9257)

www.petscooters.com

DO NOT RETURN YOUR PRODUCT TO ANY ADDRESS.

Please call or write for the location of the PET authorized service center nearest you and for the procedures for obtaining warranty claims.